# SETsafe SET fuse

#### SK Series *I*<sub>r</sub> : 10 A



#### Description

Alloy Thermal-Link / Alloy Thermal Cutoff (ATCO) is defined as a non-resettable protective device functioning one time only. It is widely used in electrical equipment. ATCO is mainly consist of fusible alloy, flux resin, case, sealant and lead wires. Normally, fusible alloy is jointed to the two lead wires. Under abnormal conditions, when the temp. reaches to the fusing temp. of ATCO, the fusible alloy melts and quickly retracts to the two lead wire ends with the aid of the flux resin and disconnects the circuit completely.

**Applications** 

Electric Heating Appliances

Home Electrical Appliances

#### Features

ATCO

- Ceramic Case
- Make a Mounting Hole
- Lead Wires Insulated
- Non-Resettable
- High Accuracy of Functioning Temp.
- RoHS & REACH Compliant

#### Customization

- Other Temp.
- The Length of Lead Wires
- Lead Wires can Make Pluggable Terminals

#### **Dimensions (mm)**


# 

L	L <sub>1</sub>	L <sub>2</sub>	L <sub>3</sub>	W	т	D	d
17.0 ± 1.0	12.5 ± 1.0	78.0 ± 3.0	5.0 ± 1.0	11.0 ± 1.0	6.0 ± 0.5	5.5 ± 1.0	UL1332 16AWG



Agency	Standards	File No.
<b>R</b> ®	UL 60691	E214712
c PU®	CAN-CSA-E60691	E214712
TUVRheinland	EN 60691	R50264747
	GB/T 9816	2020980205000182

#### **Structure Diagrams**

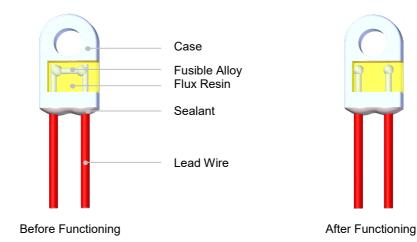


#### Marking





#### **Part Numbering System**

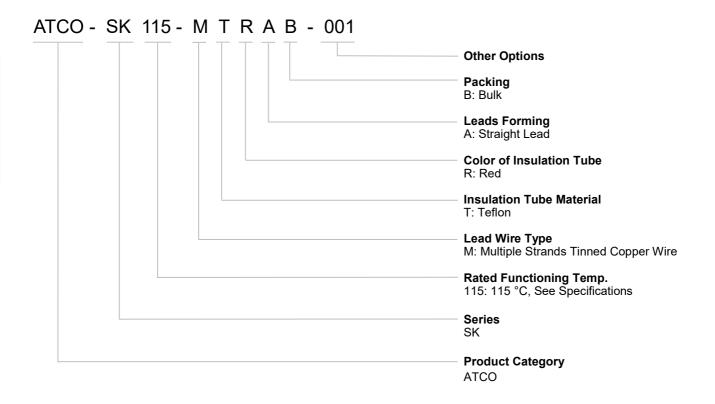



#### Glossary

ATCO

ltem	Description
тсо	<b>Thermal-Link</b> A non-resettable device incorporating a THERMAL ELEMENT which will open a circuit once only when exposed for a sufficient length of time to a temperature in excess of that for which it has been designed.
ATCO	Alloy Thermal-Link Alloy Type Thermal-Link, Alloy is the thermal element.
T <sub>f</sub>	Rated Functioning Temp.The temperature of the Alloy Thermal-Link which causes it to change the state of conductivity with a detectioncurrent up to 10 mA as the only load.Tolerance: $T_{f} \stackrel{\circ}{\scriptstyle 10} ^{\circ} C$ (GB/T 9816, EN 60691, K60691).Tolerance: $T_{f} \pm 7 \ ^{\circ} C$ (J60691).
Fusing Temp.	<b>Fusing Temp.</b> The temperature of the Alloy Thermal-Link which causes it to change its state of conductivity is measured with silicone oil bath in which the temperature is increased at the rate of 0.5 °C to 1 °C / minute, with a detection current up to 10 mA as the only load.
T <sub>h</sub>	Holding Temp. The Maximum temperature at which a Alloy Thermal-Link will not change its state of conductivity when conducting rated current for 168 hours.
T <sub>m</sub>	<b>Maximum Temp. Limit</b> The temperature of the Alloy Thermal-Link stated by the manufacturer, up to which the mechanical and electrical properties of the Alloy Thermal-Link having changed its state of conductivity, will not be impaired for a given time.
l <sub>r</sub>	Rated Current The current used to classify a Alloy Thermal-Link, which is the Maximum current that Alloy Thermal-Link allows to carry and is able to cut off the circuit safely.
<b>U</b> r	<b>Rated Voltage</b> The voltage used to classify a Alloy Thermal-Link, which is the Maximum voltage that Alloy Thermal-Link allows to carry and is able to cut off the circuit safely.

#### **Specifications**

Model	T <sub>f</sub>	Fusing Temp.	T <sub>h</sub>	T <sub>m</sub>	I <sub>r</sub>	<i>U</i> r	<b>FL</b> ®	c <b>A1</b> ®	TÜVRheinland		RoHS, REACH
	(°C)	(°C)	(°C)	(°C)	(A)	(V)	UL	cUL	TUV	ссс	
SK102	102	98 ± 2	72	200	10	AC 250	0	0	•	•	•
SK115	115	111 ± 2	85	200	10	AC 250	0	0	•	•	•
SK125	125	121 ± 2	95	200	10	AC 250	0	0	•	•	•
SK130	130	125 ± 2	100	200	10	AC 250	0	0	•	•	•
SK135	135	130 ± 2	105	200	10	AC 250	0	0	•	•	•
SK145	145	140 ± 2	115	200	10	AC 250	0	0	•	•	•
SK150	150	145 ± 2	120	200	10	AC 250	0	0	•	•	•
SK160	160	155 ± 2	130	200	10	AC 250	0	0	•	•	•
SK205	205	199 ± 3	167	200	10	AC 250	•	•	•	•	•
SK221	221	218 ± 2	186	200	10	AC 250	•	•	•	•	•

ATCO

ATCO

Note:


"

"Means certificated.

"O"Means non-certificated.

### Product Temp.-Time Curve (Reference)

The Temp.-Time Curve of Thermal-Link in different temp. oil bath.

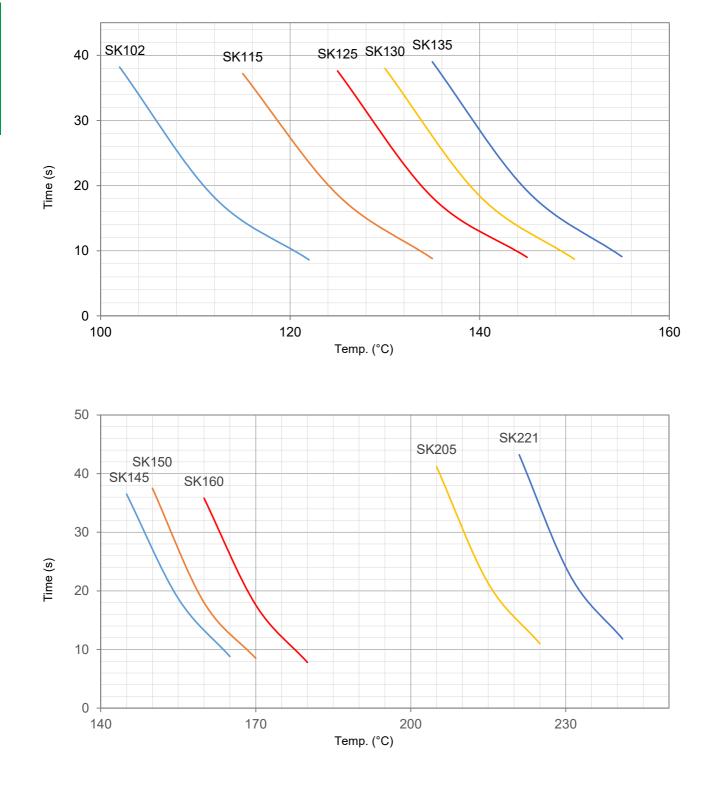

SETsafe | SET fuse


SK Series *I*<sub>r</sub> : 10 A



## SK Series *I*<sub>r</sub> : 10 A

#### Product Current-Time Curve (Reference)

The Current-Time Curve shows functioning time at multi-times rated current at room temperature 25 ± 2 °C.

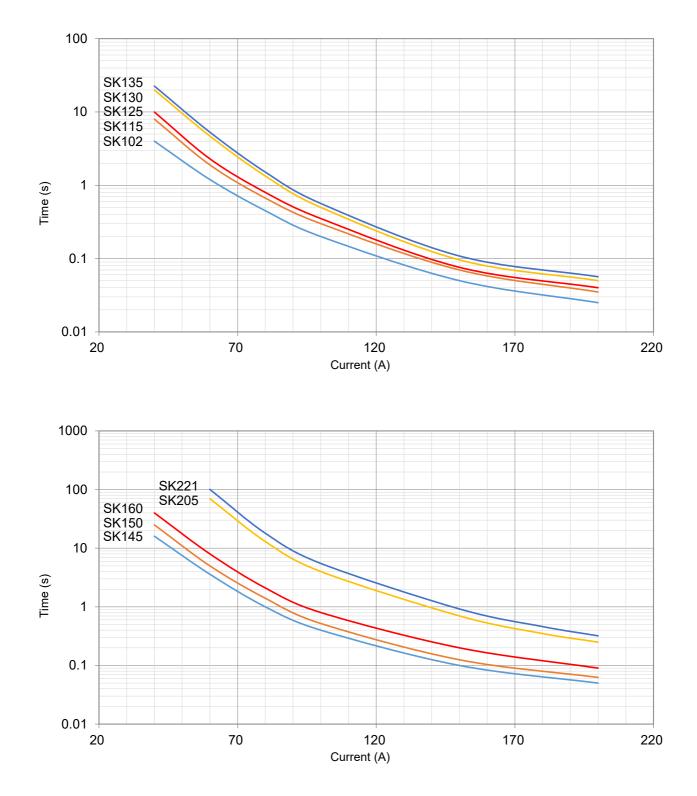

SETsafe SET fuse

SK Series *I*<sub>r</sub> : 10 A

## **Packaging Information**

Bulk


Item	PE Bag	Carton		
Dimensions (mm)	190 × 180	440 × 300 × 260		
Quantity (PCS)	3000			
Gross Weight (kg)	18 ± 10%			



**50 PCS** 

્ર્જ 180

60 Bags

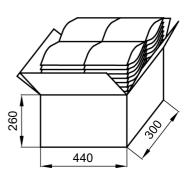



### SK Series *I*<sub>r</sub> : 10 A



# ATTENTION

#### Usage

- 1. When atmosphere pressure is from 80 kPa to 106 kPa, the related altitude shall be from 2000 meter to 500 meter.
- 2. Operating voltage less than rated voltage of ATCO, operating current less than rated current of ATCO.
- 3. Do not touch the ATCO body or lead wires directly when power is on, to avoid burn or electric shock.

#### Replace

ATCO is a non-repairable product. For safety sake, it shall be replaced by an equivalent ATCO from the same manufacturer, and mounted in the same way.

#### Storage

Do not store the ATCO at the high temp., high humidity or corrosive gas environment, avoid influencing the solder-ability of the lead wires, the product shall be used up within 1 year after receiving the goods.

#### Installation

Make Sure the Temp. of Installation Position.

- 1. It is recommended that a dummy ATCO with inbuilt thermo-couple shall be used to determine the proper temp.
- 2. The terminal product should be tested to ensure that potential abnormal conditions do not cause ambient temp. to exceed the  $T_m$  of the ATCO.
- 3. Mount the ATCO at the location where temp. rises evenly.

Installation position of mechanical performance requirements.

- 1. Do not locate the ATCO in a place where severe vibration always occurs.
- 2. Ensure that the lead wire is long enough, and avoid actions such as press, tensile or twist.
- 3. The seal or body of ATCO must not be damaged, burned or over heated.

ATCO

#### **Mechanical Connection**

Riveting

**ATCO** 

- 1. Choose small resistivity riveting material and be riveted.
- 2. A flexible lead or lead with low resistance should be used to rivet the ATCO.
- 3. Contact resistance should be minimal, Large contact resistance will lead to higher temp., ATCO Functioning in advance.

#### Soldering

Hand-Soldering

- 1. Soldering should be carried out according to Table SK-1.
- 2. The thermal element of ATCO is fusible alloy with low melting point, which is jointed with ATCO lead wires. Improper soldering operation (too high soldering temp., too long soldering time, too short lead wire etc.) may transfer more heat to the thermal element and ATCO may open in advance.
- 3. When soldering conditions are more severe than those listed in Table SK-1, a heat sink fixture should be used between soldering point and ATCO body.
- 4. When soldering, please do not pull / push or twist ATCO body or lead wires.
- 5. After soldering, let it naturally cool for longer than 20 seconds. During cooling, never move the ATCO body or lead wires.

#### Wave Soldering


The wave soldering parameters as Table SK-2, for reference only, when ATCO is for practice use, you need to do some validation experiments. For example, using X-RAY to see the fusible alloy of ATCO whether damage after wave soldering.

Rated Functioning	Max. Allo	Max. Soldering Temp.					
Temp. $(T_{\rm f})$	L <sub>s</sub> Length	Time	L₅ Length	Time	L <sub>s</sub> Length	Time	Coldening remp.
(°C)	(mm)	(s)	(mm)	(s)	(mm)	(s)	(°C)
76 to 101	10	1 <sup>a</sup>	20	2	30	3	
102 to 115	10	1 <sup>a</sup>	20	2	30	3	
116 to 135	10	1 <sup>a</sup>	20	3	30	5	400
136 to 150	10	3	20	5	30	5	
151 to 230	10	4	20	6	30	7	

#### TABLE SK-1 Hand-Soldering Time

Note:


a: Auxiliary Heat Sink Fixture is Required to Avoid ATCO Cutting off Unexpectedly.

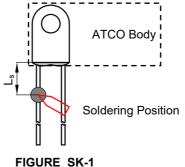

ATCO

#### TABLE SK-2 Wave Soldering Parameters Setting

Rated Functioning Temp. $(T_{\rm f})$	W	Max. Allowable F hen the Length of (Fig.	Preheating Time (t <sub>1</sub> )	Max. Wave Soldering	Dwelling Time (t <sub>2</sub> )	Cooling Time (t <sub>3</sub> )		
	L <sub>s</sub> Length	Preheating Temp.	L <sub>s</sub> Length	Preheating Temp.		Temp.		
(°C)	(mm)	(°C)	(mm)	(°C)	(s)	(°C)	(s)	(s)
76 to 130			Recom	ring				
131 to 150	20	80	30	90	< 60	≤ 260	≤ 3	≤ 10
151 to 230	20	90	30	100	< 60	≤ 260	≤ 3	≤ 10

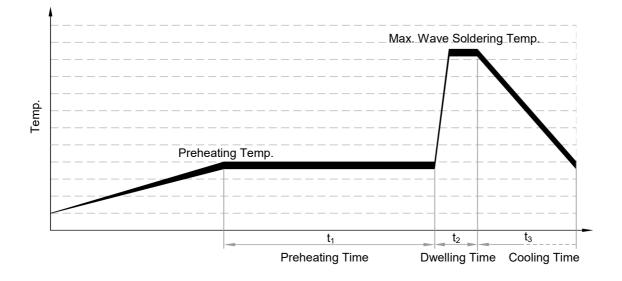

#### Lead Wire Forming

- If lead wire has to be bent, please pay attention to the distance between body and bending point. Refer to Table SK-2.
- When bending leads, please use pincher or similar tools to fix the product as shown in Fig.SK-2, to avoid damaging the product.
- 3. During forming and mounting, lead wire should not be cut, nicked, bent sharply, to avoid breaking the product.
- Tangential forces on the leads must be avoided (i.e. pushing or pulling on the leads at angle to ATCO body) as such forces may damage the seal of ATCO.

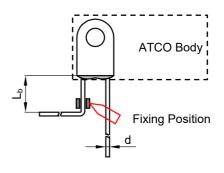




TABLE SK-3 Distance between Body and Bending Point

d	(mm)	≤ 1.0	1.0 to 1.2	> 1.2
L <sub>b</sub>	(mm)	≥ 3	≥ 5	≥ 10

SETsafe SET fuse

SK Series *I*<sub>r</sub> : 10 A