ATCO
Thermal-Link

XG Series I_r: 3 A



Description

Alloy Thermal-Link / Alloy Thermal Cutoff (ATCO) is defined as a non-resettable protective device functioning one time only. It is widely used in electrical equipment. ATCO is mainly consist of fusible alloy, flux resin, case, sealant and lead wires. Normally, fusible alloy is jointed to the two lead wires. Under abnormal conditions, when the temp. reaches to the fusing temp. of ATCO, the fusible alloy melts and quickly retracts to the two lead wire ends with the aid of the flux resin and disconnects the circuit completely.

Features

- Transparent Plastic Case
- Non-Resettable
- High Accuracy of Functioning Temp.
- Make a Mounting Hole
- RoHS & REACH Compliant


Customization

- Other Temp.
- The Length of Lead Wires
- Taping Packing Available
- Lead Wires can be Insulated
- Tinned Copper Wires or CP Wires

Applications

- Lamps
- Switched-Mode Power Supplies
- Home Electrical Appliances
- Batteries

Dimensions (mm)

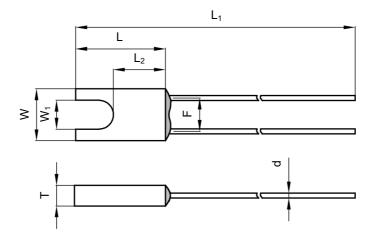

L	L ₁	L ₂	W	W ₁	Т	d	F
10.0 ± 0.5	74.0 ± 3.0	5.8 ± 0.5	5.8 ± 0.5	3.2 ± 0.5	2.3 ± 0.2	0.54 ± 0.05	3.7 ± 0.5







Agency Approvals

Agency	Standards	File No.
R .®	UL 60691	E214712
c %! ®	CAN-CSA-E60691	E214712
TÜVRheinland	EN 60691	R50384415
PS	J60691	PSE16021063 PSE16021064 PSE16021065 PSE16021066 PSE16021067 PSE16021068
(1)	GB/T 9816	2020980205000195

Structure Diagrams

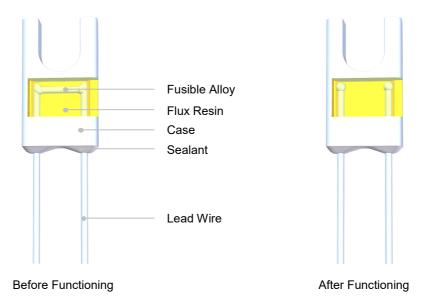


Marking

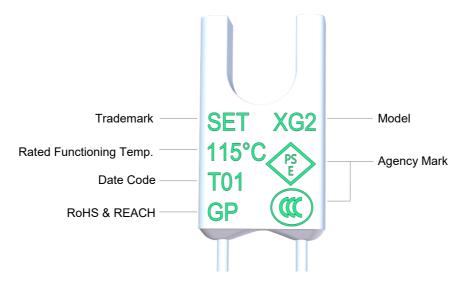





Part Numbering System

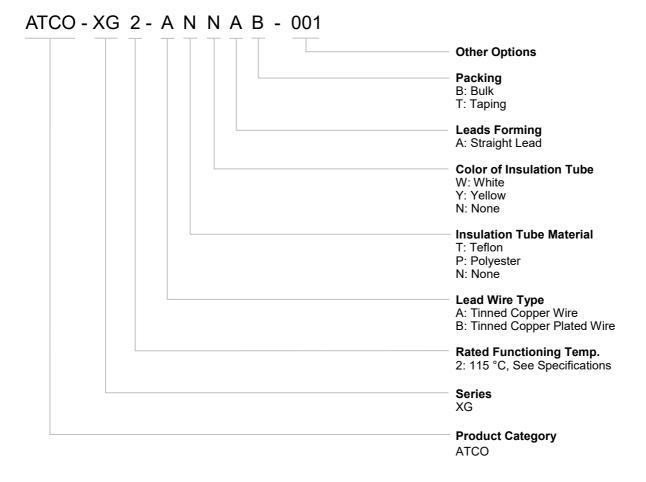





Glossary

Item	Description
тсо	Thermal-Link A non-resettable device incorporating a THERMAL ELEMENT which will open a circuit once only when exposed for a sufficient length of time to a temperature in excess of that for which it has been designed.
ATCO	Alloy Thermal-Link Alloy Type Thermal-Link, Alloy is the thermal element.
T _f	Rated Functioning Temp. The temperature of the Alloy Thermal-Link which causes it to change the state of conductivity with a detection current up to 10 mA as the only load. Tolerance: $T_f \stackrel{\circ}{:}_{0}$ °C (GB/T 9816, EN 60691, K60691). Tolerance: $T_f \div 7$ °C (J60691).
Fusing Temp.	Fusing Temp. The temperature of the Alloy Thermal-Link which causes it to change its state of conductivity is measured with silicone oil bath in which the temperature is increased at the rate of 0.5 °C to 1 °C / minute, with a detection current up to 10 mA as the only load.
T _h	Holding Temp. The Maximum temperature at which a Alloy Thermal-Link will not change its state of conductivity when conducting rated current for 168 hours.
T _m	Maximum Temp. Limit The temperature of the Alloy Thermal-Link stated by the manufacturer, up to which the mechanical and electrical properties of the Alloy Thermal-Link having changed its state of conductivity, will not be impaired for a given time.
I _r	Rated Current The current used to classify a Alloy Thermal-Link, which is the Maximum current that Alloy Thermal-Link allows to carry and is able to cut off the circuit safely.
Ur	Rated Voltage The voltage used to classify a Alloy Thermal-Link, which is the Maximum voltage that Alloy Thermal-Link allows to carry and is able to cut off the circuit safely.
CP Wire	CP Wire Tinned Copper Plated Wire







XG Series $I_r: 3 A$

Specifications

Model	T_{f}	Fusing Temp.	T_{h}	T _m	I _r	U _r	A l®	c 712 ®	À TÛVRheinland	⟨PS⟩	((()	RoHS \ REACH
	(°C)	(°C)	(°C)	(°C)	(A)	(V)	UL	cUL	TUV	PSE	ccc	
XG0	76	73 ± 2	53	200	3	AC 250	•	•	•	•	•	•
XG18	86	81 ± 2	61	200	3	AC 250	•	•	•	•	•	•
						DC 60	•	•	0	0	0	•
XG1	102	98 ± 2	79	200	3	AC 250	•	•	•	•	•	•
						DC 60	•	•	0	0	0	•
XG2	115	111 ± 2	91	200	3	AC 250	•	•	•	•	•	•
						DC 60	•	•	0	0	0	•
XG3	125	121 ± 2	100	200	3	AC 250	•	•	•	•	•	•
						DC 60	•	•	0	0	0	•
XG4	130	125 ± 2	106	200	3	AC 250	•	•	•	•	•	•
XG8	133	130 ± 2	111	200	3	AC 250	•	•	•	•	•	•
XG5	135	130 ± 2	111	200	3	AC 250	•	•	•	•	•	•
XG9	136	131 ± 2	112	200	3	AC 250	•	•	•	•	•	•
XG6	145	140 ± 2	121	200	3	AC 250	•	•	•	•	•	•
XG7	150	145 ± 2	126	200	3	AC 250	•	•	•	•	•	•
XG16	160	154 ± 2	135	200	3	AC 250	0	0	•	•	•	•
XG32	205	199 ± 3	169	250	3	AC 250	•	•	•	•	0	•
XG31	221	218 ± 2	188	250	3	AC 250	•	•	•	•	0	•

Note:

[&]quot;●"Means certificated.


[&]quot;O"Means non-certificated.






Product Temp.-Time Curve (Reference)

The Temp.-Time Curve of Thermal-Link in different temp. oil bath.

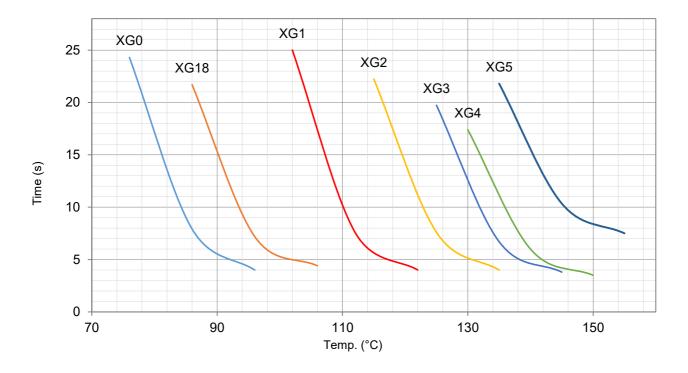

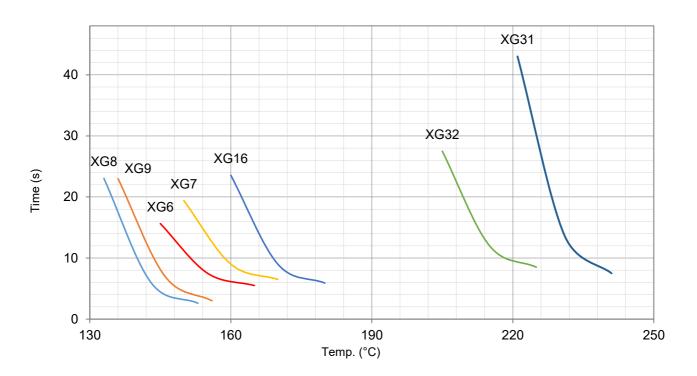







Product Current-Time Curve (Reference)

The Current-Time Curve shows functioning time at multi-times rated current at room temperature 25 ± 2 °C.

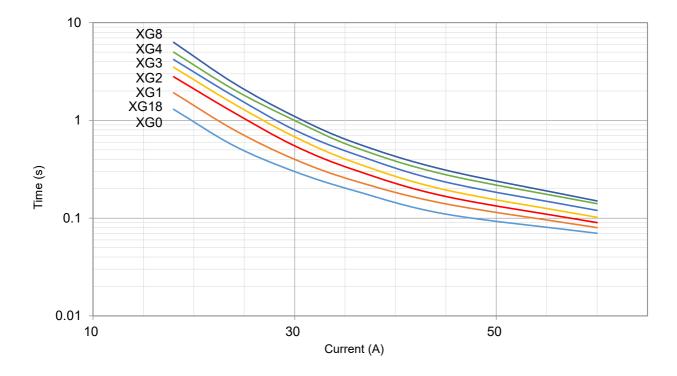

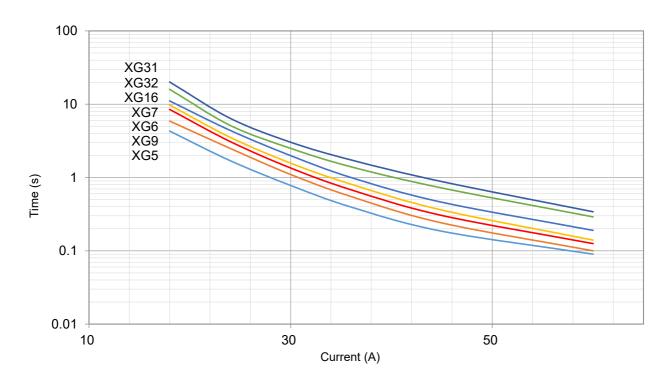




SETsafe | SET fuse

Packaging Information

Bulk

Item	PE Bag	PE Bag	Carton
Dimensions (mm)	135 × 85	190 × 180	440 × 300 × 260
Quantity (PCS)	100	1000	40000
Gross Weight (kg)			17 ± 10%

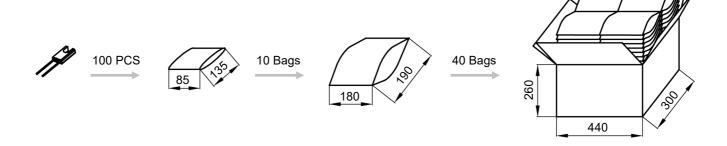




ATCO
Thermal-Link

XG Series I_r: 3 A

Taping

Item	Вох	Carton
Dimensions (mm)	328 × 200 × 70	480 × 340 × 220
Quantity (PCS)	2000	12000
Gross Weight (kg)		6 ± 10%

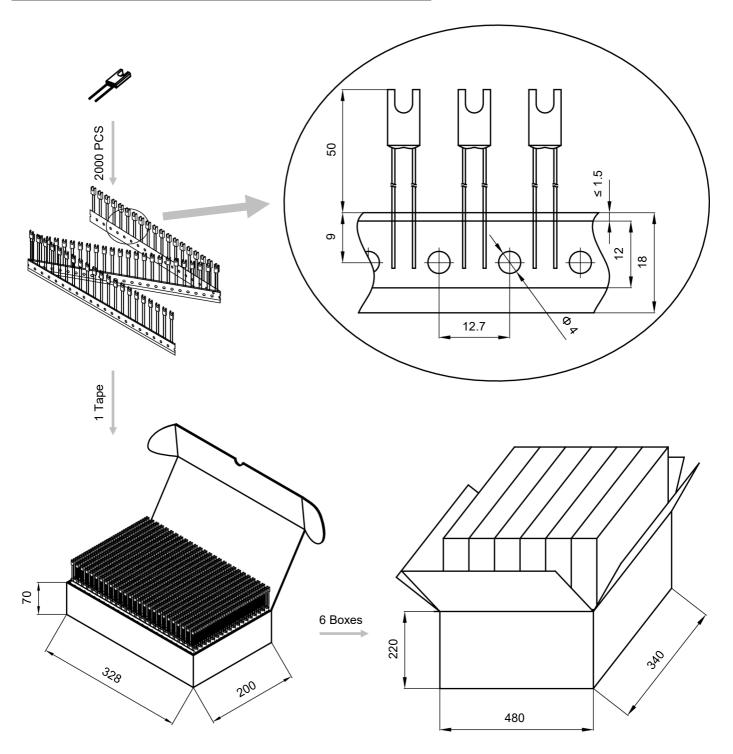





Attention

Usage

- When atmosphere pressure is from 80 kPa to 106 kPa, the related altitude shall be from 2000 meter to - 500 meter.
- 2. Operating voltage less than rated voltage of ATCO, operating current less than rated current of ATCO.
- 3. Do not touch the ATCO body or lead wires directly when power is on, to avoid burn or electric shock.

Replace

ATCO is a non-repairable product. For safety sake, it shall be replaced by an equivalent ATCO from the same manufacturer, and mounted in the same way.

Storage

Do not store the ATCO at the high temp., high humidity or corrosive gas environment, avoid influencing the solder-ability of the lead wires, the product shall be used up within 1 year after receiving the goods.

Installation

Make Sure the Temp. of Installation Position.

- 1. It is recommended that a dummy ATCO with inbuilt thermo-couple shall be used to determine the proper temp.
- 2. The terminal product should be tested to ensure that potential abnormal conditions do not cause ambient temp. to exceed the $T_{\rm m}$ of the ATCO.
- 3. Mount the ATCO at the location where temp. rises evenly.

Installation position of mechanical performance requirements.

- Do not locate the ATCO in a place where severe vibration always occurs.
- 2. Ensure that the lead wire is long enough, and avoid actions such as press, tensile or twist.
- The seal or body of ATCO must not be damaged, burned or over heated.

Mechanical Connection

Riveting

- 1. Choose small resistivity riveting material and be riveted.
- A flexible lead or lead with low resistance should be used to rivet the ATCO.
- Contact resistance should be minimal, Large contact resistance will lead to higher temp., ATCO Functioning in advance.

Soldering

Hand-Soldering

- 1. Soldering should be carried out according to Table XG-1.
- The thermal element of ATCO is fusible alloy with low melting point, which is jointed with ATCO lead wires.
 Improper soldering operation (too high soldering temp., too long soldering time, too short lead wire etc.) may transfer more heat to the thermal element and ATCO may open in advance.
- When soldering conditions are more severe than those listed in Table XG-1, a heat sink fixture should be used between soldering point and ATCO body.
- 4. When soldering, please do not pull / push or twist ATCO body or lead wires.
- After soldering, let it naturally cool for longer than
 seconds. During cooling, never move the ATCO body or lead wires.

Wave Soldering

The wave soldering parameters as Table XG-2, for reference only, when ATCO is for practice use, you need to do some validation experiments. For example, using X-RAY to see the fusible alloy of ATCO whether damage after wave soldering.



XG Series $I_r: 3 A$

TABLE XG-1 Hand-Soldering Time


Rated Functioning	Max. Allowable Soldering Time for Different Lead Wire Length (Fig.XG-1)							Max. Soldering Temp.			
Temp.	L _s	Time		L _s	Tir	ne	L _s	Time		Coldoning Tomp.	
$(T_{\rm f})$	Length	Tinned Copper Wire	CP Wire	Length	Tinned Copper Wire	CP Wire	Length	Tinned Copper Wire	CP Wire		
(°C)	(mm)	(s)	(s)	(mm)	(s)	(s)	(mm)	(s)	(s)	(°C)	
76 to 101	10	1 ^a	4	20	2	5	30	3	6		
102 to 115	10	1 ^a	4	20	2	5	30	3	6		
116 to 135	10	1 ^a	4	20	3	6	30	5	8	400	
136 to 150	10	3	6	20	5	8	30	5	8		
151 to 230	10	4	7	20	6	9	30	7	10		

Note:

a: Auxiliary Heat Sink Fixture is Required to Avoid ATCO Cutting off Unexpectedly.

TABLE XG-2 Wave Soldering Parameters Setting

Rated Functioning Temp. (T_f)	W	Max. Allowable Preheating Temp. When the Length of Lead Wire is Different (Fig.KG-1)			Preheating Time (t ₁)	Wave Soldering	Dwelling Time (t ₂)	Cooling Time (t ₃)
	L _s Length	Preheating Temp.	L _s Length	Preheating Temp.	_	Temp.		
(°C)	(mm)	(°C)	(mm)	(°C)	(s)	(°C)	(s)	(s)
76 to 130		Recommend Hand-Soldering						
131 to 150	20	80	30	90	< 60	≤ 260	≤ 3	≤ 10
151 to 230	20	90	30	100	< 60	≤ 260	≤ 3	≤ 10

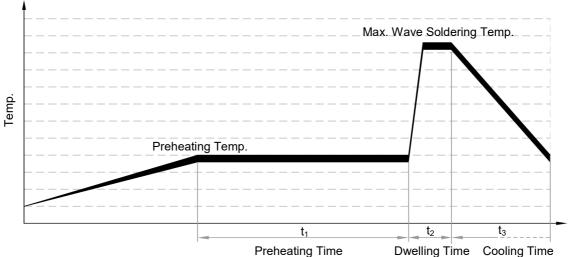





XG Series I_r: 3 A

Lead Wire Forming

- If lead wire has to be bent, please pay attention to the distance between body and bending point. Refer to Table XG-3.
- When bending leads, please use pincher or similar tools to fix the product as shown in Fig.XG-2, to avoid damaging the product.
- 3. During forming and mounting, lead wire should not be cut, nicked, bent sharply, to avoid breaking the product.
- Tangential forces on the leads must be avoided (i.e. pushing or pulling on the leads at angle to ATCO body) as such forces may damage the seal of ATCO.

TABLE XG-3 Distance between Body and Bending Point

d	(mm)	≤ 1.0	1.0 to 1.2	> 1.2
L _b	(mm)	≥ 3	≥ 5	≥ 10



Thermal-Link

XG Series $I_r: 3 A$



Usage

- 1. When atmosphere pressure is from 80 kPa to 106 kPa, the related altitude shall be from 2000 meter to 500 meter.
- 2. Operating voltage less than rated voltage of ATCO, operating current less than rated current of ATCO.
- 3. Do not touch the ATCO body or lead wires directly when power is on, to avoid burn or electric shock.

Replace

ATCO is a non-repairable product. For safety sake, it shall be replaced by an equivalent ATCO from the same manufacturer, and mounted in the same way.

Storage

Do not store the ATCO at the high temp., high humidity or corrosive gas environment, avoid influencing the solder-ability of the lead wires, the product shall be used up within 1 year after receiving the goods.

Installation

Make Sure the Temp. of Installation Position.

- 1. It is recommended that a dummy ATCO with inbuilt thermo-couple shall be used to determine the proper temp.
- 2. The terminal product should be tested to ensure that potential abnormal conditions do not cause ambient temp. to exceed the T_m of the ATCO.
- 3. Mount the ATCO at the location where temp. rises evenly.

Installation position of mechanical performance requirements.

- 1. Do not locate the ATCO in a place where severe vibration always occurs.
- 2. Ensure that the lead wire is long enough, and avoid actions such as press, tensile or twist.
- 3. The seal or body of ATCO must not be damaged, burned or over heated.



SETsafe | SET fuse

Mechanical Connection

Riveting

- 1. Choose small resistivity riveting material and be riveted.
- 2. A flexible lead or lead with low resistance should be used to rivet the ATCO.
- 3. Contact resistance should be minimal, Large contact resistance will lead to higher temp., ATCO Functioning in advance.

Soldering

Hand-Soldering

- 1. Soldering should be carried out according to Table XG-1.
- 2. The thermal element of ATCO is fusible alloy with low melting point, which is jointed with ATCO lead wires. Improper soldering operation (too high soldering temp., too long soldering time, too short lead wire etc.) may transfer more heat to the thermal element and ATCO may open in advance.
- 3. When soldering conditions are more severe than those listed in Table XG-1, a heat sink fixture should be used between soldering point and ATCO body.
- 4. When soldering, please do not pull / push or twist ATCO body or lead wires.
- 5. After soldering, let it naturally cool for longer than 20 seconds. During cooling, never move the ATCO body or lead wires.

Wave Soldering

The wave soldering parameters as Table XG-2, for reference only, when ATCO is for practice use, you need to do some validation experiments. For example, using X-RAY to see the fusible alloy of ATCO whether damage after wave soldering.

TABLE XG-1 Hand-Soldering Time

Rated Functioning	Max. Allo	Max. Soldering Temp.					
Temp. $(T_{\rm f})$	L _s Length	Time	L _s Length	Time	L _s Length	Time	Coldening Temp.
(°C)	(mm)	(s)	(mm)	(s)	(mm)	(s)	(°C)
76 to 101	10	1 ^a	20	2	30	3	
102 to 115	10	1 ^a	20	2	30	3	
116 to 135	10	1 ^a	20	3	30	5	400
136 to 150	10	3	20	5	30	5	
151 to 230	10	4	20	6	30	7	

Note

a: Auxiliary Heat Sink Fixture is Required to Avoid ATCO Cutting off Unexpectedly.


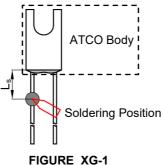






TABLE XG-2 Wave Soldering Parameters Setting

Rated Functioning Temp. (T_f)	W	hen the Length of I	able Preheating Temp. th of Lead Wire is Different (Fig.XG-1)			Max. Wave Soldering	Dwelling Time (t ₂)	Cooling Time (t ₃)
	L _s Length	Preheating Temp.	L _s Length	Preheating Temp.		Temp.		
(°C)	(mm)	(°C)	(°C) (mm) (°C)			(°C)	(s)	(s)
76 to 130		Recommend Hand-Soldering						
131 to 150	20	80	30	90	< 60	≤ 260	≤ 3	≤ 10
151 to 230	20	90	30	100	< 60	≤ 260	≤ 3	≤ 10

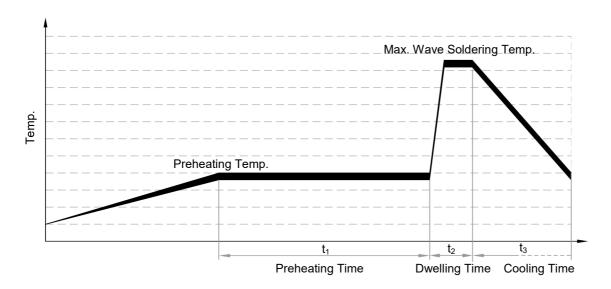

Lead Wire Forming

- If lead wire has to be bent, please pay attention to the distance between body and bending point. Refer to Table XG-3.
- When bending leads, please use pincher or similar tools to fix the product as shown in Fig.XG-2, to avoid damaging the product.
- 3. During forming and mounting, lead wire should not be cut, nicked, bent sharply, to avoid breaking the product.
- Tangential forces on the leads must be avoided (i.e. pushing or pulling on the leads at angle to ATCO body) as such forces may damage the seal of ATCO.

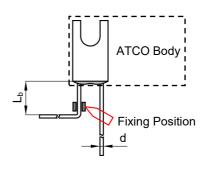


FIGURE XG-2

TABLE XG-3 Distance between Body and Bending Point

d	(mm)	≤ 1.0	1.0 to 1.2	> 1.2
L _b	(mm)	≥ 3	≥ 5	≥ 10